




THE ACOUSTIC BOX

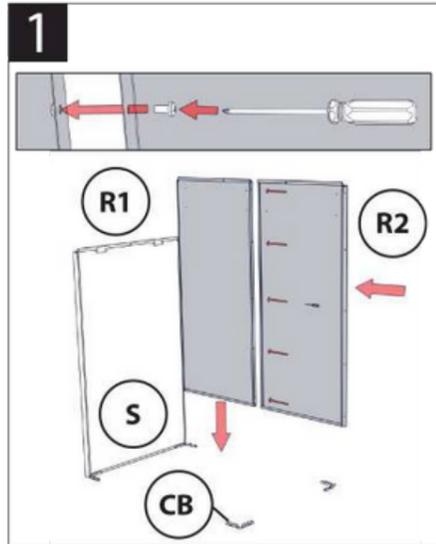


1800 HIGH MODELS
BETWEEN 1400MM &
1700MM IN WIDTH -
WITH REAR PANEL

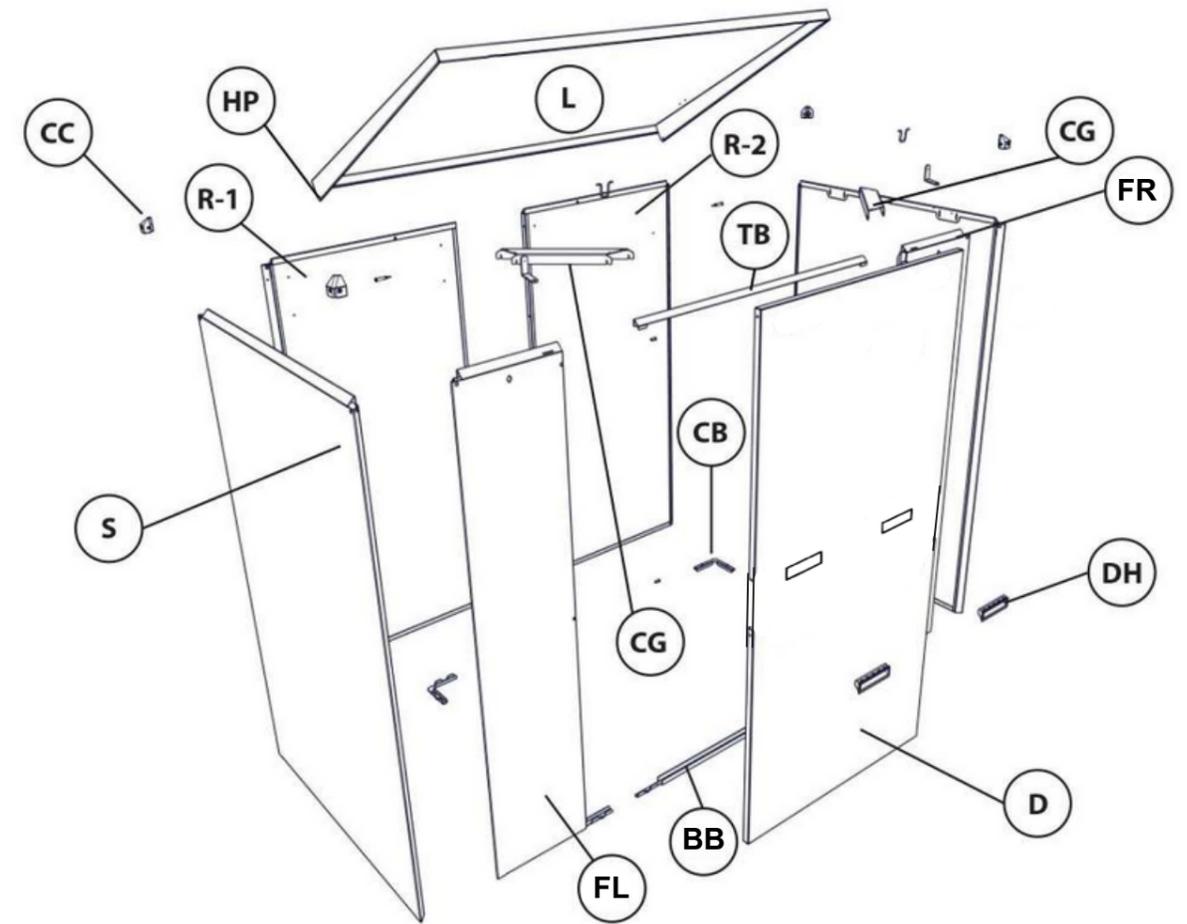


Screw Rear Left and Rear Right panels together using M5 screw as shown. Push down onto corner brackets with the Side Panel.

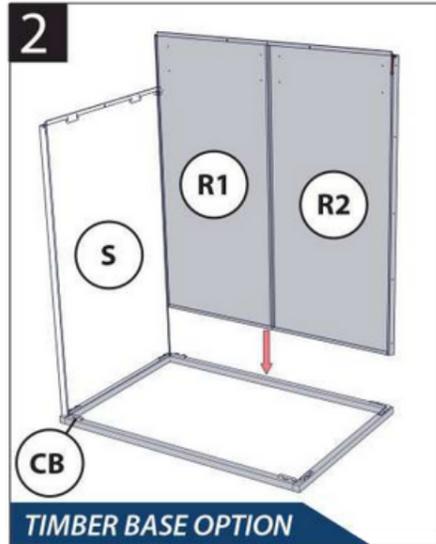


If no concrete slab / other flat surface is available, use timber base frame as shown.

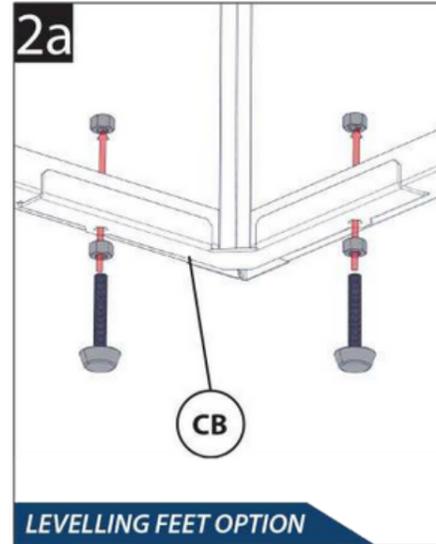


If installing on an uneven / unlevelled surface, please use the optional feet (through holes in bottom corners) to raise the box and adjust the nuts below / above the corner bracket to suit.

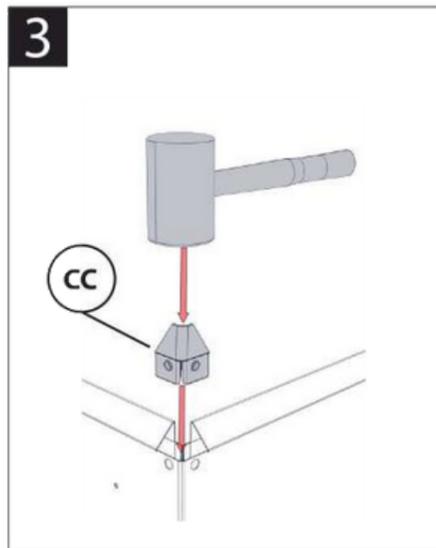

Now insert a corner cap into the holes in the top of the panel to join them. Tap into place with a mallet.

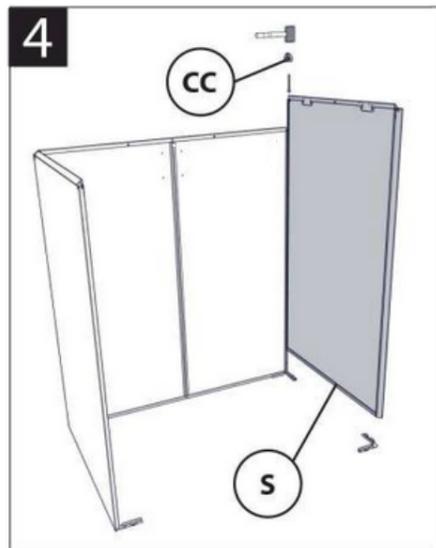


Insert the other side panel and cap.

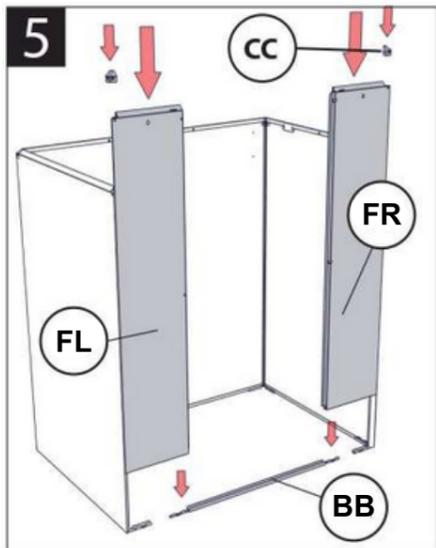


Slot Front Left and Front Right panels into the Lower Brace and Corner Brackets. Tap Corner Caps into place with a mallet.


REQUIRED TOOLS

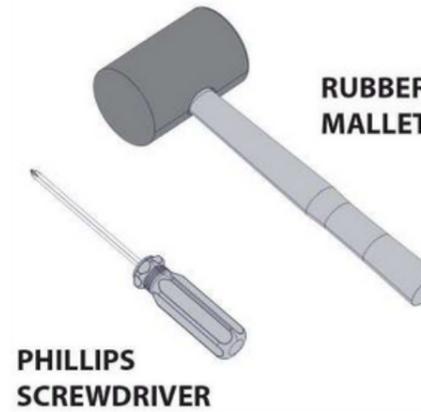


Part No.	Description	Qty.
S	SIDE PANEL	2
R	REAR PANEL	1
FL	FRONT PANEL LEFT	1
FR	FRONT PANEL RIGHT	1
D	REMOVABLE FRONT DOOR	1
L	LID	1
CB	CORNER BRACKET	4
HP	HINGE PIN	2
LL	LATCH	1
CC	CORNER CAP	4
DH	DOOR HANDLE	2
TB	TOP BRACE	1
BB	BOTTOM BRACE	1
CG	CORNER GUSSET	2
BP	BASE PINS	10

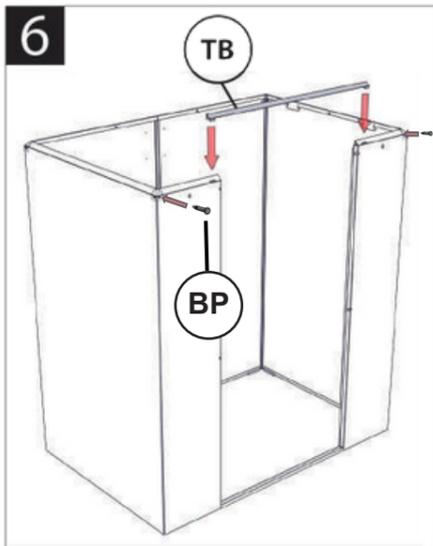


6 Insert Top Brace into slots in Front Left and Front Right Panels. Insert 2 x BP into slots on the front panel through the corner caps.

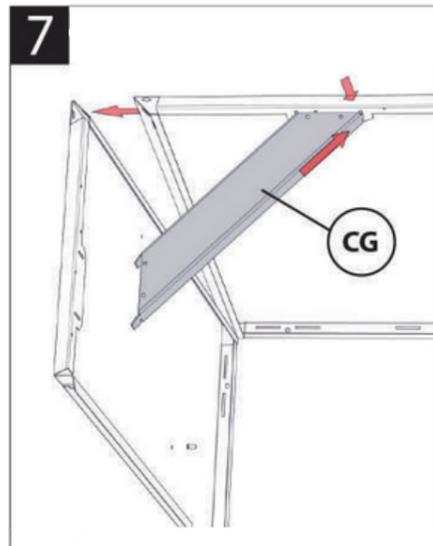


7 Insert corner gussets into the side and front AND side and rear panels by inserting into the corner and pushing downwards.

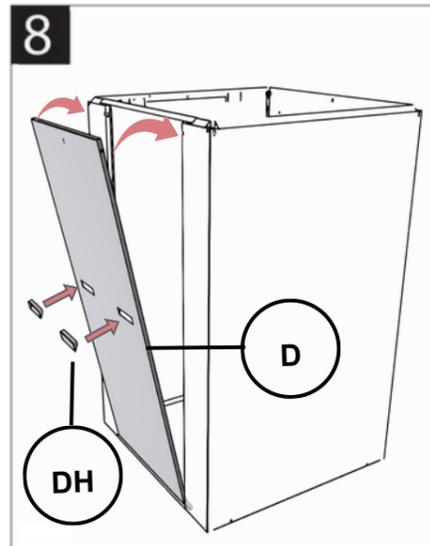


8 Insert the handles into the door until a "click" is heard. Place the removable front door into the panel by placing the lip of the door over the front panel step. Insert the door by aligning the studs on the side with the slots in the front panel. Push in slightly and then down.

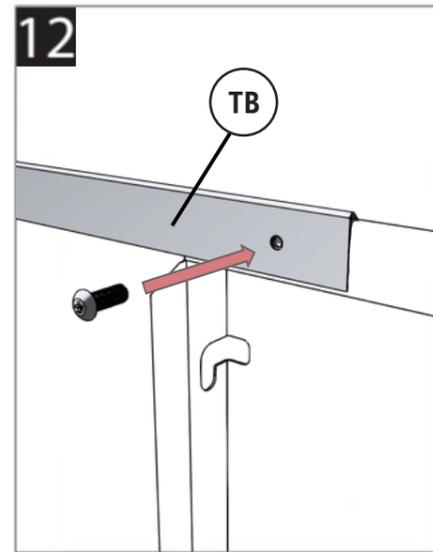


12 Secure Top Brace to Front Left and Front Right Panels with a Tek Screw.

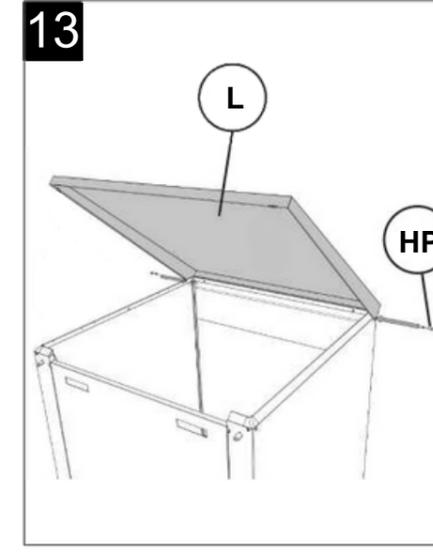


13 Attach top door to unit with hinge pins. Align pins with holes and tap into place with a mallet.

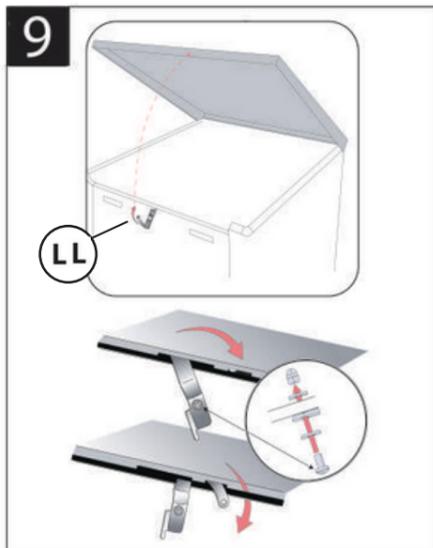

9 Attach the latch to the door using the supplied screw/washer/nut as per above. Rotate the Latch clockwise to 'lock' into the top lid.

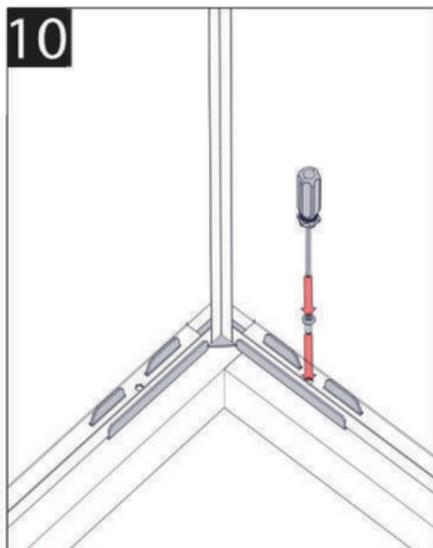

10 Anchor box to timber frame as shown or concrete slab / other flat surface.

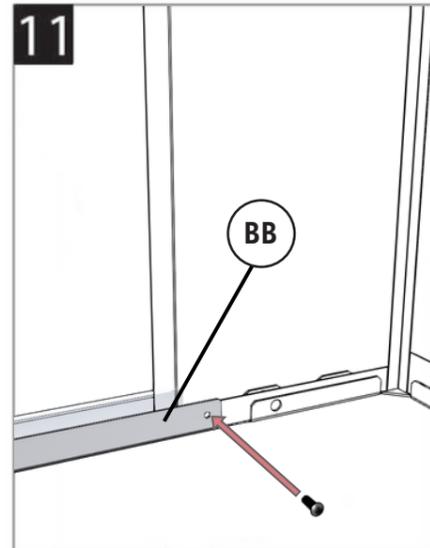

11 Secure Bottom Brace to Front Left and Front Right Panels with a Tek Screw.



T: (02) 9620 5430 E: info@acousticbox.com.au W: www.acousticbox.com.au

For our **3D Assembly Instructions** please scan the QR code below or go to:

<https://www.acousticbox.com.au/information/download-assembly>

