



Roller Cords
For connection to roller / cord points

Edge Binding

Wind Skirting
with encased lead rope counters wind action (Optional)

OverCover With straps.
Ensure this section covers the entire length from sunlight when rolled up.

Multi Point attachment
May come as single point attachment placed at opposite end of roller connection.

Single Point attachment
May come as single point attachment placed at opposite end of roller connection.

Clip Harness
Pulls cover evenly

Haul Cord
for rolling out cover

Both covers are for illustration purposes only.

Cover Assembly

- 1- Unwrap cover
DO NOT USE KNIFE
- 2- Unroll cover so that it is sitting folded flat at one end of the pool with the haul cord end of the cover on top.
- Solar Cover:
- 3- Insert flat rod and secure eyelet.
- 4- Attach haul cord and pull onto pool.
- 5- Attach roller cords evenly to roller.

Check Monthly
Inspect and clean cover.
Avoid build up of residue.
Operate smoothly avoiding damage.

Storage
For long periods, flush cover, top and bottom with fresh water.

Record of Purchase **Date**

From: _____

Tax Invoice No: _____

Installed by: _____

Daisy Saves Covers - 5 Year Pro Rata Warranty
Rollers - 10 Year Pro Rata Warranty
Call: 1300 551 811
Fax: 1300 885 242
commercial@daisypoolcovers.com.au

Daisy is Australia's largest supplier of pool covers and rollers.

www.daisypoolcovers.com.au



Daisy Saves



Care & Maintenance

Cover Installation

Roller Assembly

Commercial Pool Covers and Rollers



Roller Assembly

- 1 - Put hand wheel over end shaft and insert 6 off M8 X 25mm bolts through hand wheel into aluminum end slug.
 - 2 - Repeat for the other end
 - 3 - Slide end frame (including bearing) on to the 25mm axel.
 - 4 - Fix retaining washer to the end of shaft with M8 X 25mm bolt and spring washer (on winch models - place 25mm washer over the shaft, insert 5mm split pin and spread split pin)
 - 5 - (if supplied) Insert outrigger roller shaft into extended outrigger bearing, secure with end plug.
 - 6 - Repeat other side.
 - 7 - Connect Cover to roller.
- Place each cord evenly under the screws in the roller (using the marks on the cord) ensuring the cover is recovered evenly onto the roller.

NOTE: *Our equipment is strong However:*

Care should be exercised when moving a roller with cover. Collisions and sudden impact places excessive strain on end shaft and other components.

Hand Wheel

Cast Aluminum/Powder coated
6 X M8 X 25mm Bolt's
75mm centre for End Shaft

End Slug

Cast Aluminum
with 6 of Female threaded holes

End Shaft

Stainless steel/Washer/Split Pin
25mm Axel. Square drive for winch attachment if applicable.

Tube

Anodised alumium

End Frame

Powder coated aluminum or
316 Stainless Steel internal bushes.

Castors

Lockable.
Stainless Steel.

Check Monthly

All bolts to ensure they are tight.
Correct roller operation. Make sure there are no unusual sounds when using the roller or moving it.
Wipe or wash rollers regularly and keep clean.

