


how to measure a WinterKleen cover

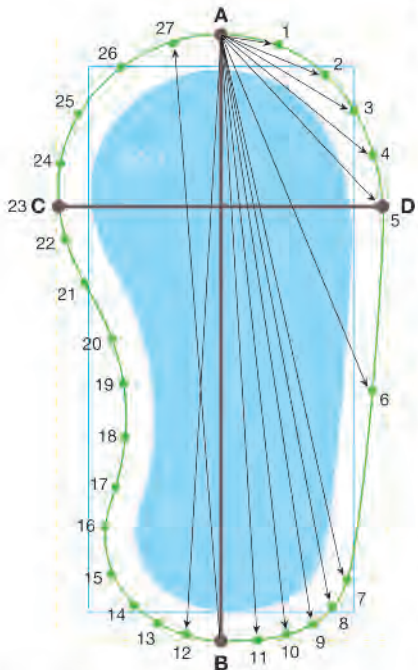

Billing Details: _____ Date / / _____

Business Name: _____

Contact: _____

For. Name: _____ Contact No.: _____

Street Address: _____

1 ----- Indicates rectangular fitting measure (by the normal m² method with the additional 200mm at the nearest points).

2 ■■■ Indicates Curvilinear Measuring: Photocopy this page

1 Chalk mark two points ● A and ● B at the longest point 200mm from the edge of the pool. (Record total width and length below)

2 Chalk mark and number a series of ● points 200mm out from pool edge, ● 1, ● 2, ● 3 etc. starting clockwise from ● A all around to ● B about 900mm apart. Closer on tighter curves further apart for straighter edges.

3 Measure the distances from ● A to marked ● all points and record the distance to every chalk marked. eg ● A to ● 1 = 957mm or 9.57 cm

4 Measure the distances from ● B to marked ● points and record the distance to every chalk marked. eg ● B to ● 1 = 8500mm or 8.500cm

5 Draw a sketch of the pool outline (like the one on left) indicating approximate location of points A and B and the points between.

6 Fax or email to us your measurements in the table below.

The same method and measurements will be used to make the cover.

NOTE: This measuring procedure applies only to curvilinear pools.
Extra charges apply to the making of these shaped WinterKleen covers


● A → ● B Total LENGTH = _____

● C → ● D Total WIDTH = _____

From ● A →	●	From ● B ←
eg 850 mm	1	eg 10850 mm
	2	
	3	
	4	
	5	
	6	
	7	
	8	
	9	
	10	
	11	
	12	
	13	
	14	
	15	
	16	
	17	
	18	
	19	
	20	
	21	
	22	
	23	
	24	
	25	
	26	
	27	
	28	

From ● A →	●	From ● B ←
eg 10850 mm	29	eg 850 mm
	30	
	31	
	32	
	33	
	34	
	35	
	36	
	37	
	38	
	39	
	40	
	41	
	42	
	43	
	44	
	45	
	46	
	47	
	48	
	49	
	50	
	51	
	52	
	53	
	54	
	55	
	56	

Draw a sketch of the plan. Include a photo image if possible.

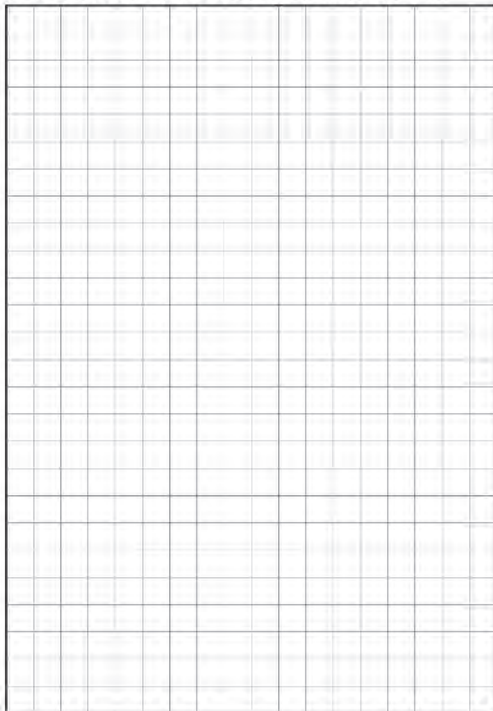

Daisy Saves



WinterKleen

How to Measure

How to Install

Record of Purchase _____

Date _____

From: _____

Tax Invoice No: _____

Installed by: _____



- 8 Year Pro Rata Warranty

Call: 1300 551 811

Fax: 1300 885 242

commercial@daisypoolcovers.com.au



Daisy is Australia's largest supplier of pool covers and rollers.

www.daisypoolcovers.com.au

Installation Instructions

Daisy WinterKleen™ Leaf Cover

A Daisy WinterKleen™ Leaf Cover is your ultimate protection against leaves and dirt.

Thank you for choosing Daisy WinterKleen™, we're sure your new pool cover will give you many years of trouble-free service as it keeps your pool clean and reduces evaporation when it's not in use for extended periods.

Installing a WinterKleen is quite simple, but please ensure you follow these easy instructions carefully to make sure you achieve maximum life and ease-of-use from it.

1. Unfold the cover and lay it carefully over the pool. Position the cover so it is central and best matches the shape of your pool for even coverage. Use your 4 weights to hold the cover in position.

PLEASE NOTE: If your pool has a raised coping or surround and you have ordered your WinterKleen™ Leaf Cover to the correct size for this, you can position the tie-down fittings over the outside edge of the coping to fix your pool cover. (See Diagram B Alternative Fixing below.)

2. You now need to decide where you will drill the holes for the fixing pins. For fixing the tie-downs as per the standard method (Diagram A) or the alternative method, the next step is similar.

Position the tie-down fittings around the pool cover. These should be spread evenly around the pool cover approximately every 900mm on the straight edges. Along curves and at corners you will need more tie-downs and they may need to be closer together than this.

Mark roughly where you will drill the fixing holes.

It is important that you take into consideration any existing fittings or landscaping.

Your Daisy tie-down fittings are easily adjustable, so any obstacles can usually be accommodated simply by adjusting the tie-down length.

Also consider the surface/s you'll have to drill into.

Grouting – be sure it is firm and sound. Grouting can shatter and become dislodged if it is 'hammer' drilled.

Solid sandstone, brick paving or pebble-coated pool surrounds – check for cracks or possible hollow areas. These surfaces can lift up from the base they are laid on over time and may shatter or crack when 'hammer' drilled.

Terracotta or ceramic pool surrounds – take care to avoid cracking, flaking or shattering. Avoid using a 'hammer' drill for these materials as it can cause cracking. Drill carefully, and it is wise to drill a smaller 'pilot' hole before enlarging it with the final bit.

Timber decking – this is relatively easy to drill, but be careful to avoid cracking. Also ensure timber is deep enough to accommodate the fitting.

3. Once you have adjusted your tie-down fittings as necessary, mark the final drilling points for the fixing pins.

To ensure the WinterKleen will be positioned centrally over the pool, begin by drilling the holes for several of the tie-downs at either end of the pool.

If your pool is rectangular, start at the four corners.

For a good fit, drill holes should be at least 25 centimetres from the pool waterline.

Drill each 10mm hole to a depth of 40mm.

It is best not to drill vertically, but angle the hole slightly away from the pool (see Diagram A).

An angle of 10 to 20 degrees from vertical will create some tension and avoid any chance of the fitting pin being pulled out of a vertical hole.

4. Once you've drilled the hole 40mm deep and on the correct angle, blow out any debris from the hole.

Gently tap the PVC insert into the hole until it is flush with the surface of the pool surround.

PLEASE NOTE: Sometimes, the insert may grip in the hole before it is all the way in and not move further. As long as it is at least half way in, simply trim off the excess plug flush with the pool surround surface with a hammer and chisel. You may then need to clean the centre hole up with a 6 to 6.5mm drill.

5. Drill holes and attach the first few tie-down fittings – at either end or all four corners.

It is important to secure these first few fittings and recheck that the Daisy WinterKleen™ Leaf Cover is central on the pool before fitting more fixings.

If the cover is not central, now is the time to adjust the tie-downs before moving on to drill and attach more fittings.

6. Once you are satisfied with the pool cover position, work your way around the rest of the pool, drilling the holes and attaching tie-downs.

It is best to work in small sections. Checking and adjusting tie-down tension as you go enables you to make sure the cover remains central and the tension is even all around the pool.

7. Once all holes are drilled and tie-downs attached, go round the pool and check and adjust for even tension and perfect pool cover position.

8. Once you're happy, tie off the loose ends of the tie-down cords with a simple slip-knot or similar in front of the adjustable cord-lock. This will ensure stay correctly adjusted and your Daisy WinterKleen™ Leaf Cover is neat and tightly fitted.

To remove your Daisy WinterKleen™ Leaf Cover, simply release the cord-locks on the fittings on one side of the pool


only. This releases the tension, so the rest of the fittings can be simply pulled out without releasing the cords.

To refit your cover, simply follow the above removal process in reverse.

WARRANTY

A Daisy WinterKleen™ Leaf Cover has a 8 year pro-rata warranty.

Please retain your purchase receipt in a safe place as proof of purchase date should you need to make a warranty claim.

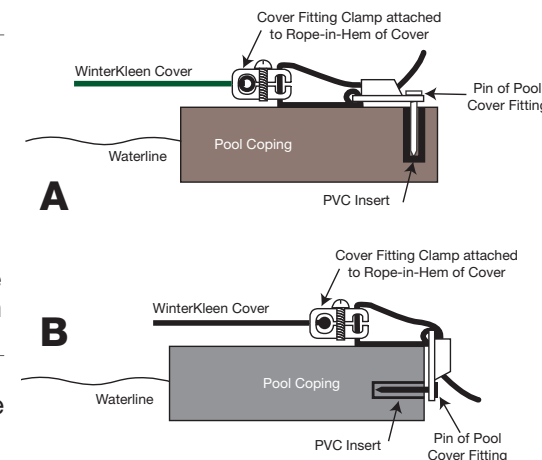

You will need

- Hammer
- Screwdriver
- Drill
- 10mm drill bit/s (1 x masonry bit supplied) – more than one may be required depending on the material/s you'll be attaching the pool cover fittings to, eg masonry and timber
- 12 – 20mm Chisel
- Safety glasses
- 4 x heavy weights (buckets filled with water or similar)

